


Model: All Vortex Models

Guide: Vortex Rating Label & 'AIR GAP CHECKED' Label Positions

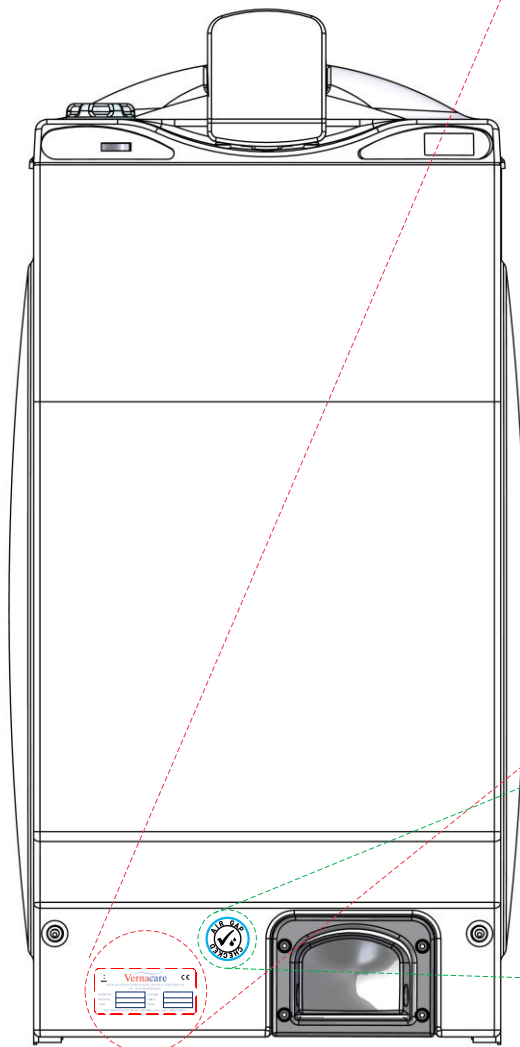

MODEL No.	<input type="text"/>	Amps/Hz	<input type="text"/>
SERIAL No.	<input type="text"/>	PHASE	~
DATE	<input type="text"/>	VOLTS	<input type="text"/>

Read relevant manual prior to installation, use or repair of this machine

LOCATION OF THE EXISTING RATING LABEL



LOCATION OF THE 'AIR GAP CHECKED' LABEL